

# Minerva Quick Tips

Although the appearance of the Menu, Info Bar and Guide has changed, most of the functionality is very similar. Below are some highlights on the Minerva software covering the most noticeable differences.

**Info Bar.** Press the **Info** button on the remote to view the current program title and an abbreviated program description. To view additional program information and see the next program, press the **Info** button a second time.

**Guide.** To access the program guide, press the **Guide** button on the remote. The guide contains 5 days of program data. Please note that when a set-top-box first loads or reloads, only the first 90 minutes of guide data appears. Full guide information will be available in about 30 minutes.

The Myrio program guide featured color codes for various program types. The only color code in Minerva is a light gray color indicating that the program is a movie. Some programs in the guide begin with a blue star, this represents that it is a first-run program.

When scrolling in the guide, if you wish to view a current program, you will need to navigate to the program and press **OK** on the remote. This places the program in the upper left preview window. To exit the guide and watch the program, press **Exit** on the remote.

There are default guides available on all accounts. The “All” guide will show all possible programming, regardless if subscribed. “Subscribed” shows only the channels you are paying for. “HD” will list high-definition channels if subscribed. “PPV” contains the Pay-Per-View channel. Press the **Guide** button on the remote multiple times to cycle through the various guides. When exiting the guide, you will be in the last guide displayed. If you exit the guide and appear to be missing channels, press the **Guide** button on the remote, choose the desired guide (most likely “All” or “Subscribed”) and then exit.

**Music.** The Music Choice channels are now part of the regular program guide. You can access music channels by using the channel up/down button or by entering a specific channel number. The My Media or Music buttons on the remote do not currently tune to the music channels.

**Caller ID (if subscribed).** The Caller ID screen pop-up appears in a smaller box in the upper left hand corner, rather than at the bottom of the screen. To access Caller ID history, press **Menu** on the remote. Using the arrow keys select **My Library**, press **OK**. Using the arrow keys on the remote, navigate to **Caller ID**, press **OK**. Use the arrow keys to review the past 25 calls.

**Personal Video Recorder (if subscribed).** To access the Personal Video Recorder menu and view recorded programs, press **Menu** on the remote. Using the arrow keys select **PVR**, press **OK**. Using the arrow keys on the remote, navigate the various PVR options and settings. The **→|** button on the remote no longer accesses PVR options.

**PIN Code.** The default PIN code is 0000. You will need to enter this code to access the Settings menu or purchase a Pay-Per-View event. If you desire to have this changed for security reasons, please contact the office.

**Exit Button.** Pressing the **Exit** button on the remote will close all menus or exit the program guide. Press this button if you find yourself in a pinch and just want to get back to full-screen programming. In Myrio this was usually accomplished by press the DTV or Home button.

**Minerva instructional video tutorials will play periodically on channel 1 and be available to watch online anytime by going to our Web site:**  
<http://www.fbc.bz>